

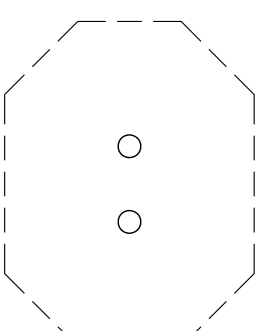


INSTALLATION INSTRUCTIONS

1. PLAN THE FINAL POSITION OF THE PODS ENSURING THERE IS SUFFICIENT SPACE
2. EXCAVATE THE FOUNDATION HOLES.
3. PLACE THE POD IN THE FOUNDATION HOLE AND FILL WITH CONCRETE, ENSURE POD IS LEVEL.
4. DO NOT ALLOW THE PODS TO BE USED UNTIL THE CONCRETE HAS SET (2 TO 3 DAYS).
5. FOLLOW THE MAINTENANCE INSTRUCTIONS SUPPLIED.
6. DURING INSTALLATION CARE MUST BE TAKEN TO PREVENT HAZARDS TO CHILDREN.
7. CARE SHOULD BE TAKEN IF CONDITIONS ARE ABNORMAL.

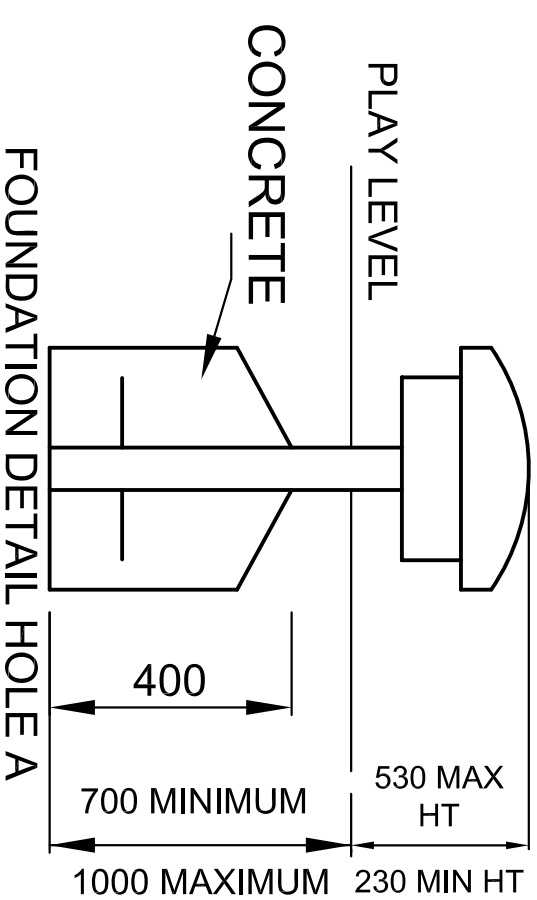

PLAN SCALE 1:100

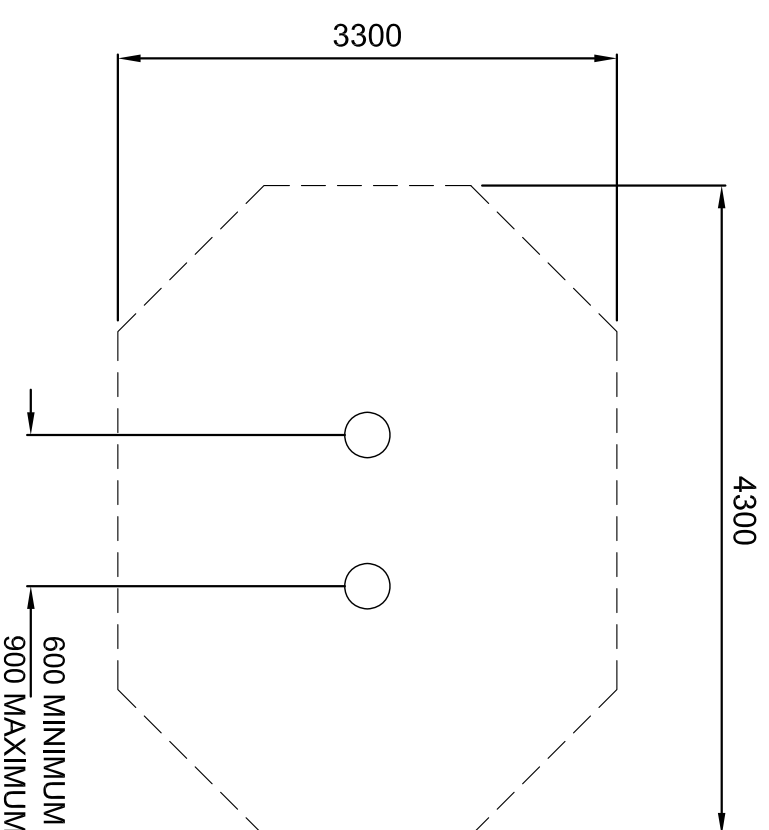

NO SAFETY SURFACING REQUIRED
MINIMUM USE ZONE SHOWN

DO NOT SCALE THIS DRAWING
SCALE 1:50 WHEN PRINTED ON A3

GROUND PLAN	DZA175
REV	02
DRAWN	JPC
SCALE	1:50 @ A3
DATE	26/05/06
SAFETY SURFACE AREA	
HOLE A 400x400	