


# Bumper Swing Seat SRE865 / 885 Assembly Instruction

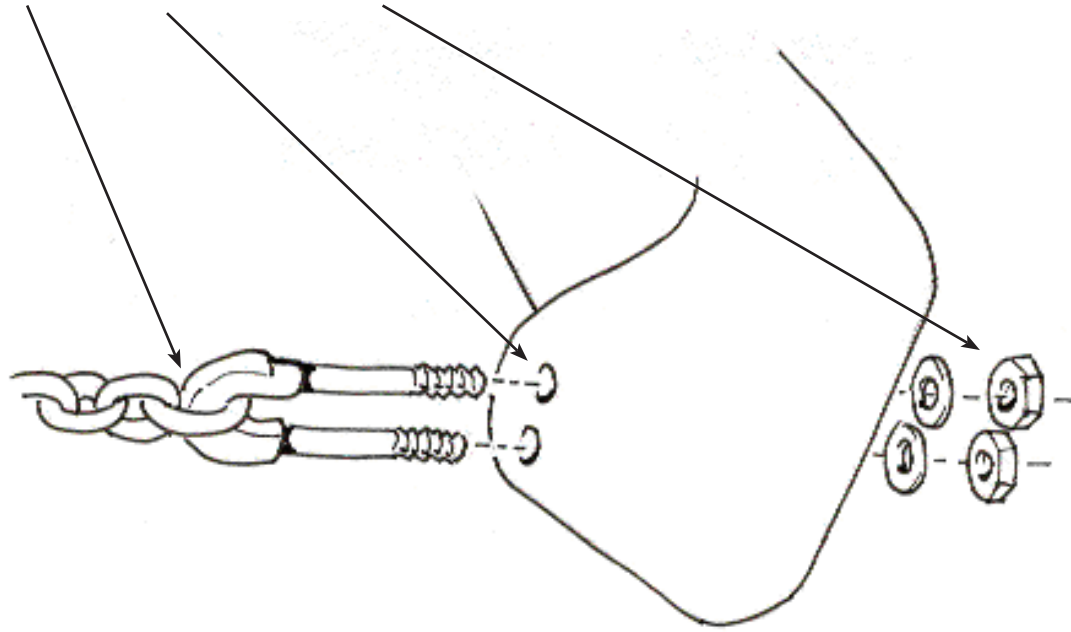


1. Insert the last link of the chain into moulded U bolt.
2. Push the U bolt into the seat so that the threaded ends protrude through the underside of the seat.
3. Secure the U bolt with washers and M8 lock nuts. **DO NOT** overtighten the lock nuts or damage to the bearing may occur.

### Parts List.

- Seat (black) - SRE805
- U Bolt 8mm - ASS808
- U Bolt 6mm - ASS806
- Washer - WSR030
- M8 Lock Nut - LKN314

**ALL LINKS OF THE CHAIN ARE VISIBLE MAKING IT EASIER TO INSPECT AND MAINTAIN. A CHOICE OF DIFFERENT SIZED U BOLTS ALLOWS FOR USE WITH BOTH 6mm AND 8mm CHAINS.**

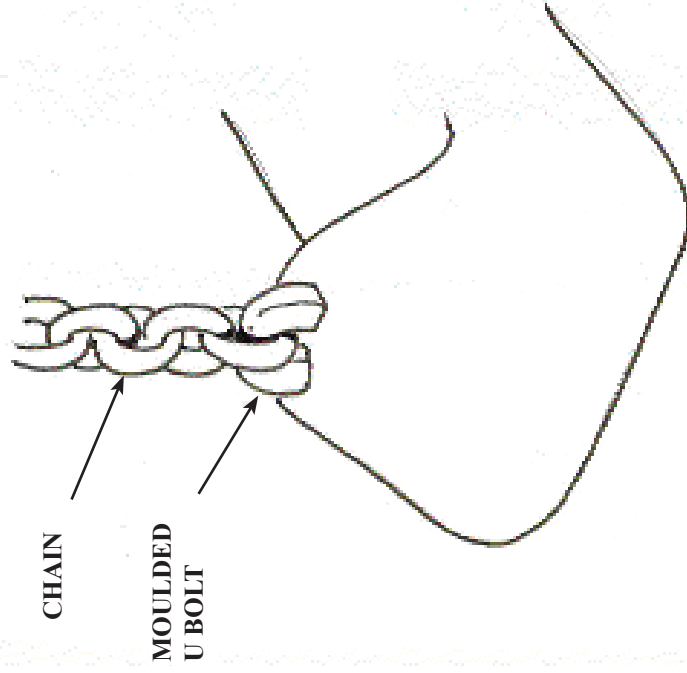

**Sutcliffe Play**  
design  
make  
play

Waggon Lane  
Upton Portreath  
West Yorkshire WF9 1JS  
Telephone +44 (0) 1971 653200  
Facsimile +44 (0) 1971 653222  
info@sutcliffeplay.co.uk  
www.sutcliffeplay.co.uk