

design
make
play

SutcliffePlay

Waggon Lane
Upton Pontefract
West Yorkshire WF9 1JS
Telephone +44 (0) 1977 653200
Facsimile +44 (0) 1977 653222
info@sutcliffeplay.co.uk
www.sutcliffeplay.co.uk

Activity Centre - Medical Installation Instructions ACT000

ACT000

Activity Centre Installation Instructions



- 1 Check using the Parts List that none of the components are missing.
- 2 Plan the final position of the play equipment ensuring there is sufficient space.
- 3 Excavate the foundation holes in accordance with the plan.
- 4 Sort and identify parts before assembly.
- 5 Place the Post in the foundation hole and fill with concrete. Ensure Post is level and at the correct depth.
- 6 When the concrete has set (2 - 3 days), fit the Panels.
- 7 Do not allow the equipment to be used until the concrete has completely set and the required safety surfacing has been installed.
- 8 Tighten all fixing bolts.
- 9 Follow the maintenance instructions supplied.


During installation care must be taken to prevent hazards to children.
Care should be taken if conditions are abnormal.

ACT000

Activity Centre
Installation Instructions

design
make
play

SutcliffePlay

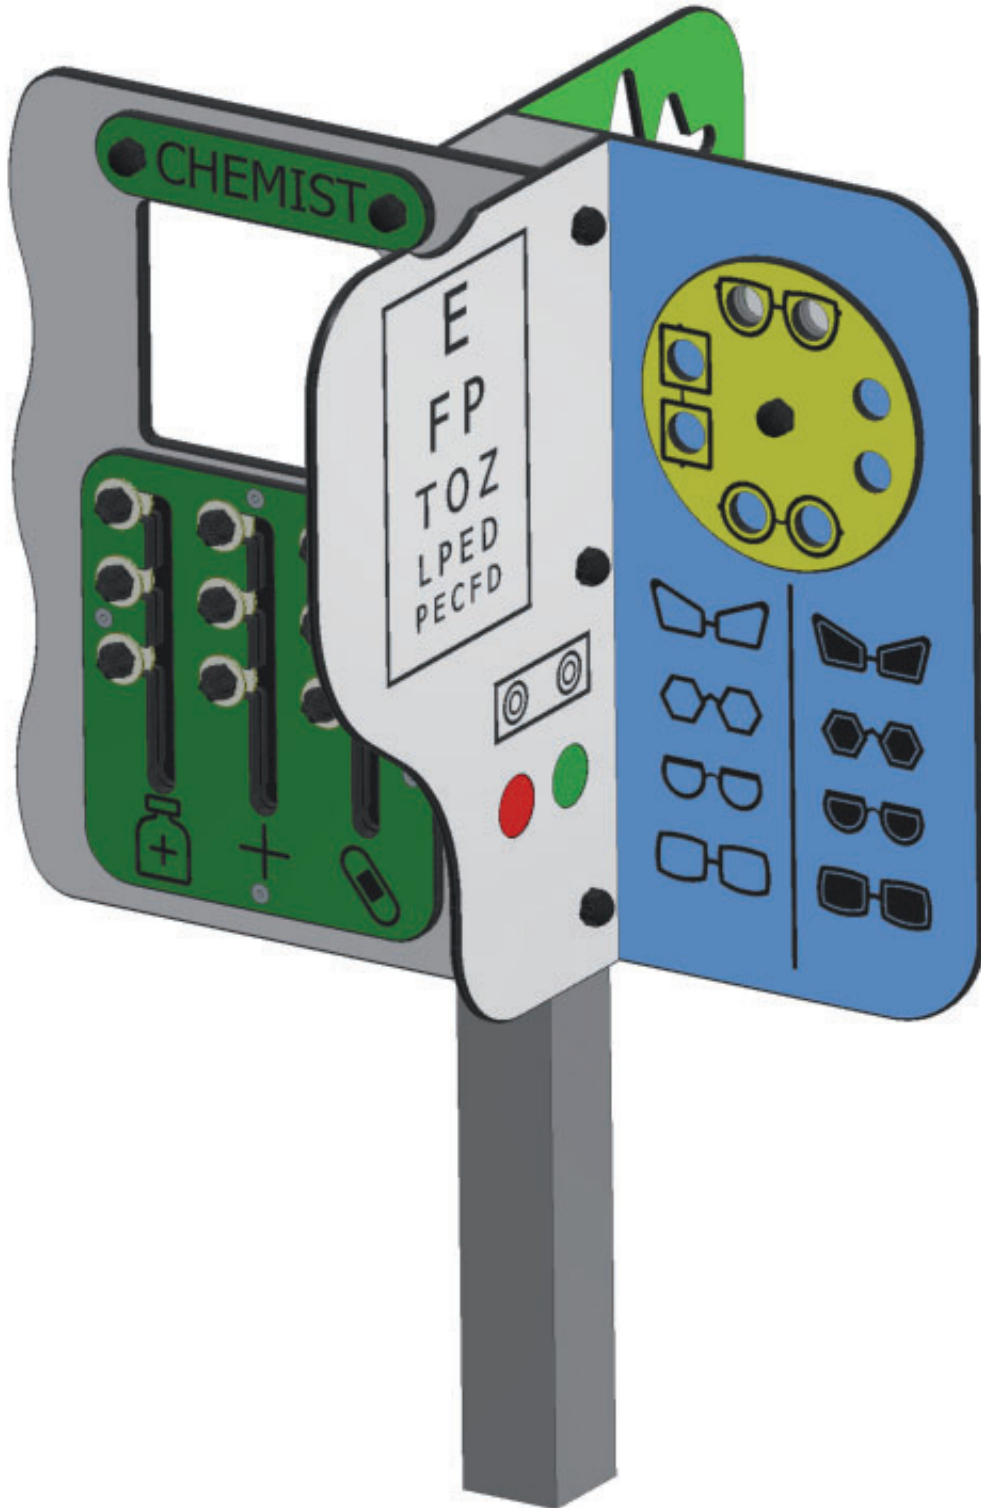


ACT000

Activity Centre Parts List


design
make
play
SutcliffePlay




Post
ACT001 x 1

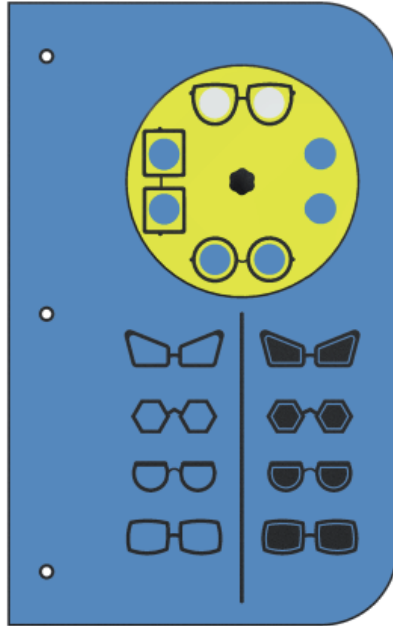


Glasses & Body Panel
ACT011 x 1

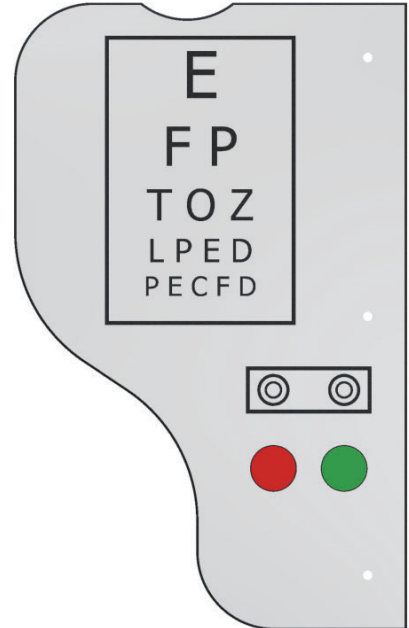


Opticians & X-Ray Panel
ACT014 x 1

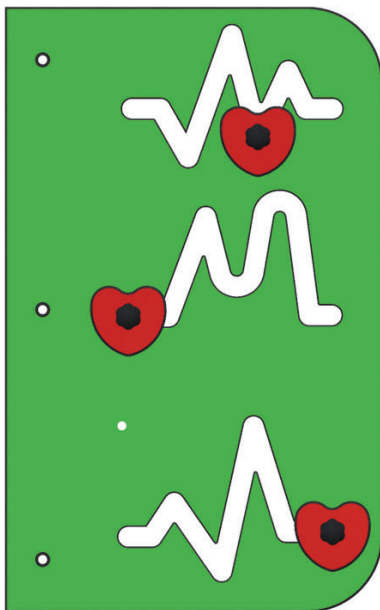

Heartbeat Panel
ACT006 x 1

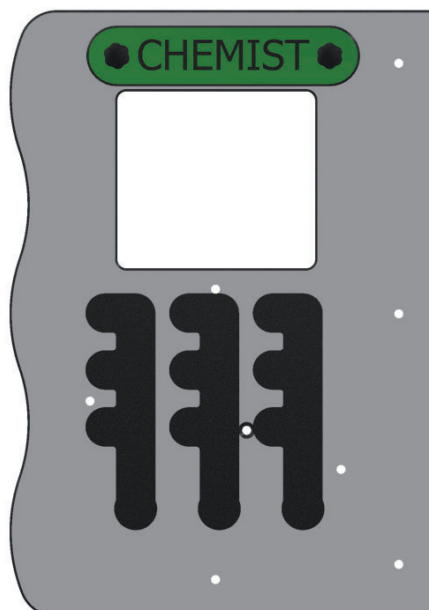

Chemist Base Panel
ACT002 x 1

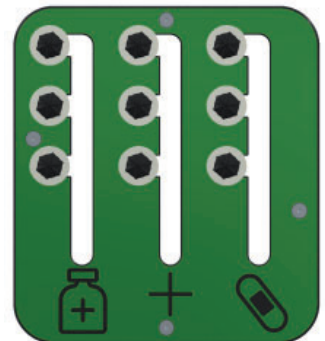

Chemist Sub Assy
ACT002 x 1


ACT000

Activity Centre
Parts List

design
make
play
SutcliffePlay



Loose Fixing Kit
ACT000F x 1

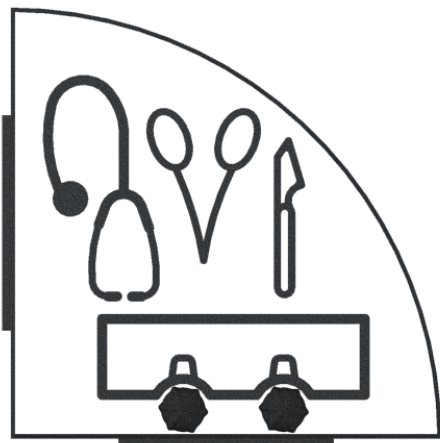


Doctors Table Assy
ACT009 x 1

ACT000

Activity Centre Installation Instructions - Panel Assembly

design
make
play
SutcliffePlay

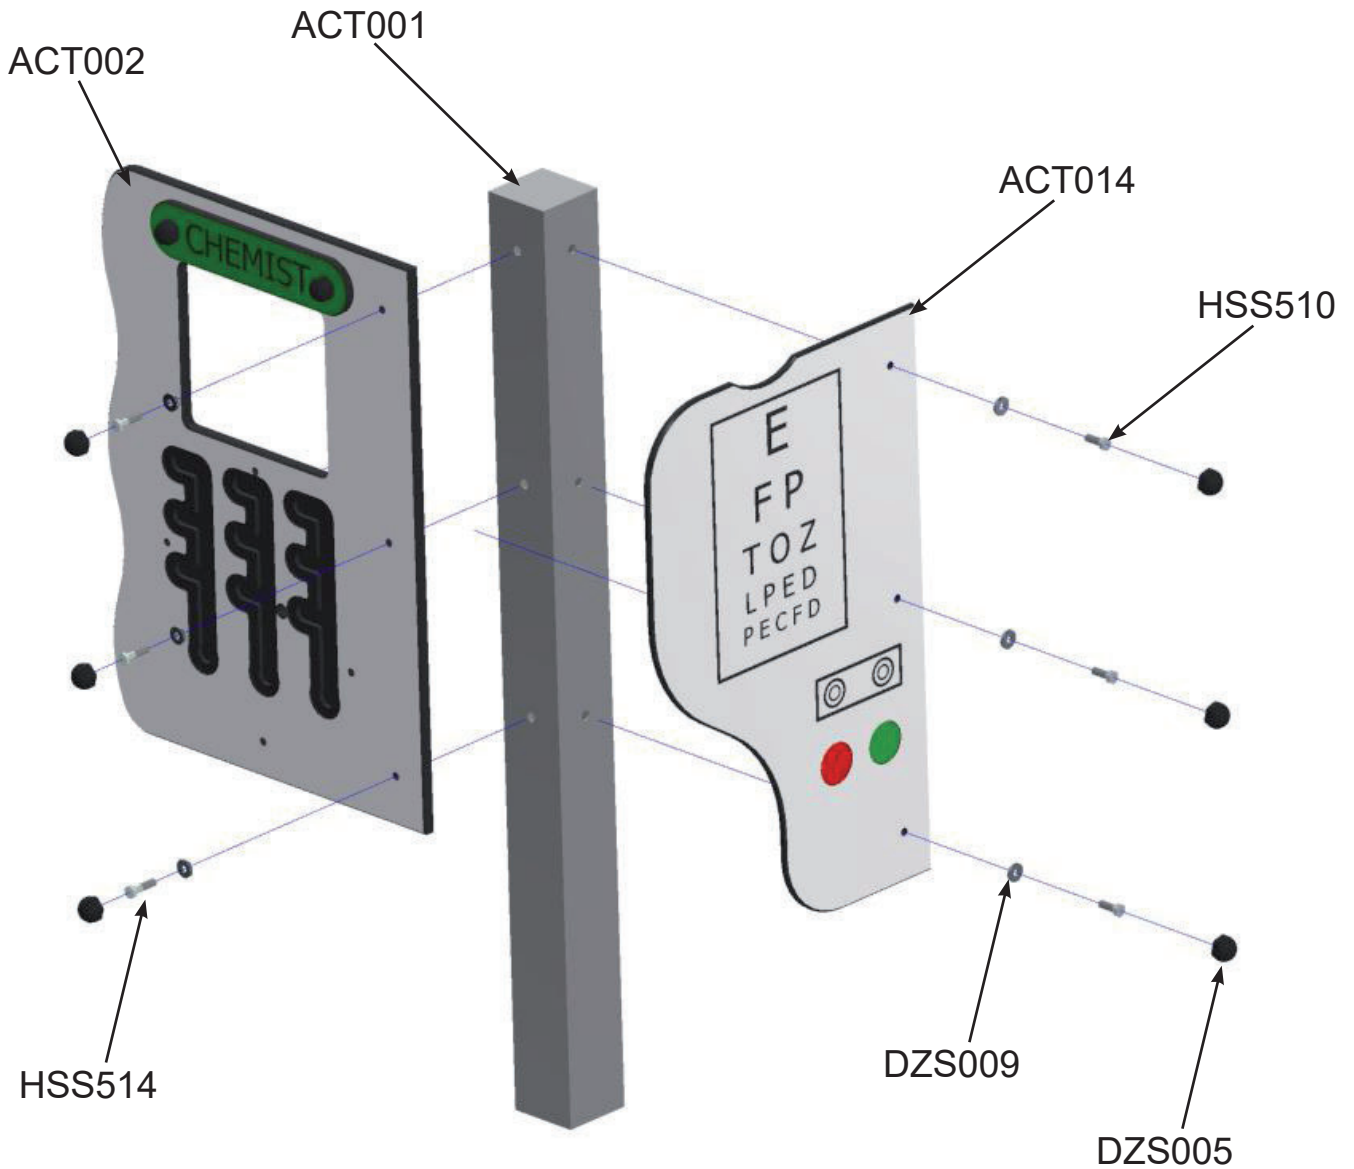


Ref	Description	Qty
1 - ACT001	Activity Centre Post	1
2 - ACT002	Chemist Base Panel	1
3 - ACT014	Opticians / X-ray Panel	1
4 - HSS510	M10 x 30 Bolt	9
5 - HSS514	M10 x 40 Bolt	3
6 - DZS009	M10 Step Washer	12
7 - DZS005	M10 Nut Cover	12

ACT000

Activity Centre

Installation Instructions - Table Assembly

design
make
play
SutcliffePlay

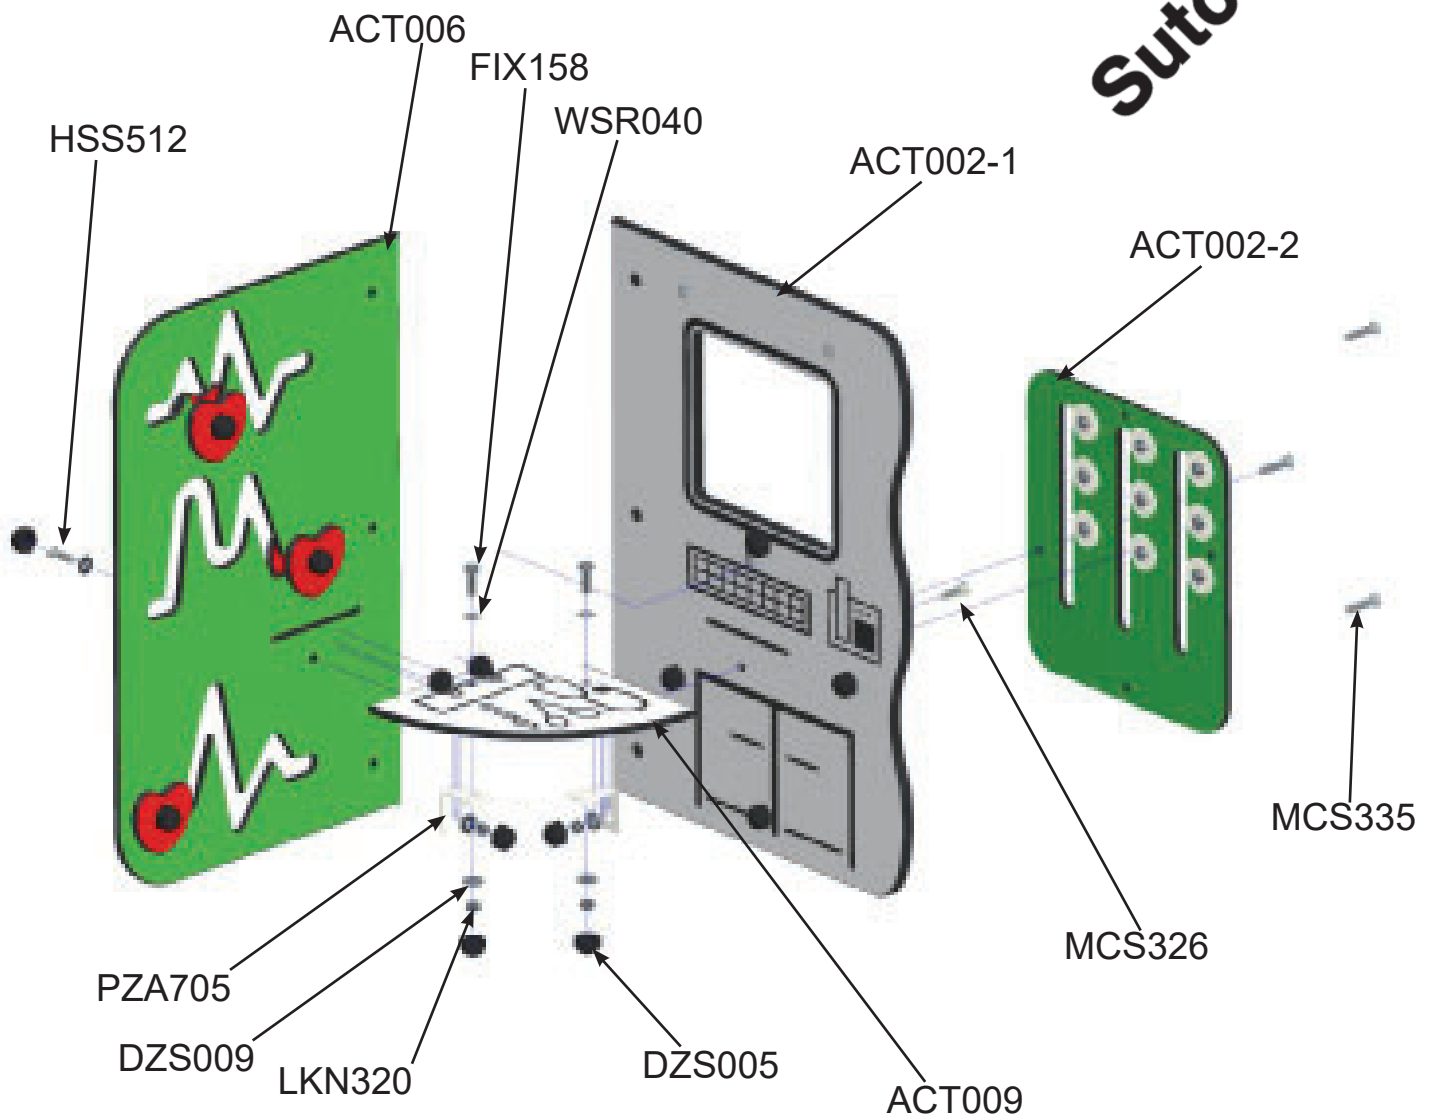

Ref	Description	Qty
1 - ACT002-1	Chemist Base Panel	1
2 - ACT002 -2	Chemist Sub Assy	1
3 - ACT006	Heartbeat Panel	1
4 - ACT009	Doctors Table	1
5 - HSS512	M10 x 35 Bolt	1
6 - FIX158	M10 x 35 Security Screw	2
7 - WSR040	M10 Plain Washer	2
8 - MCS326	M10 x 40 CSK Bolt	1
9 - MCS335	M10 x 50 CSK Bolt	4
10 - PZA705	L - Bracket	2
11 - DZS009	M10 Step Washer	9
12 - DZS005	M10 Nut Cover	8
13 - LKN320	M10 Nyloc Nut	8

ACT000

Activity Centre Maintenance Instructions



NOTE

The warranty is invalidated if these instructions are not followed.

All wood needs annual inspection and retreatment where required.

Recommended Regular Inspection and Maintenance

	Interval Days				
	7	14	28	56	365
Check stability of structure, tighten connections if required.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Check all uprights at ground level for corrosion and/or rot. Replace any defective parts.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Check all painted elements for damage, rub down and repaint or replace as required.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Check chain/ropework assemblies for wear and damage, replace if required.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Check rotating and pivot points for wear and smooth running lubricate or replace if required.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Check Rubber Wheel for wear and/or damage, and replace if the rubber is deteriorating.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Check tension cables, adjust if required.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Check wear of cables, replace if required.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Check slide chutes for smoothness and any foreign elements, remove any found.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Check rubber safety surfaces for damage and poor performance, repair or replace if required.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Check loose fill safety surfaces, remove any foreign elements, rake level and top up if required.	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Disposal Instructions

All components should be broken down into categories of:-

- 1 **Mild Steel** - all Swing Frames, Playzone, Toddlerzone, Teenzone activities, Deck Frames and Springie Frames.
- 2 **Stainless Steel** - all Slides, Mirror Panels.
- 3 **Aluminium** - all Playzone and Toddlerzone Posts.
- 4 **Galvanised Steel** - all Chains and Teenzone Posts.
- 5 **Moulded Rubber Products without steel inserts** - all Toddlerzone Caps and edge details.
- 6 **Timber** - all natural timber, plywood, and MDF panels.

Wherever possible these materials should be taken to specialist recycling organisations and recycled.

In some cases where composite materials are used, then disposal at land fill sites is the only alternative such as:

- 7 **Moulded Rubber Products encasing steel inserts** - all Swing Seats, Deck Tops, Duo/Dizzy Disc Tops.
- 8 **High Pressure Laminate** - all Toddlerzone, Playzone and Teenzone Panels.
- 9 **Steel Core Polypropylene Rope** - all Scramble Nets, Space Nets, Playzone/Toddlerzone Ropes.